



QUBEMURFOR®

Compact I / Renfort de maçonnerie en rouleau

INSTALLATION

- Ⓔ Place Murfor® Compact on the blocks
- Ⓓ Plaats Murfor® Compact op de blokken
- Ⓕ Placer Murfor® Compact sur les blocs
- Ⓓ Platzieren Sie Murfor® Compact direkt auf dem Mauerwerk
- Ⓔ Posicione Murfor® Compact encima de los bloques
- Ⓓ Posare il Murfor® Compact sui blocchi
- Ⓒ Разместите Murfor® Compact на блоках

- Ⓔ Apply thin layer mortar
- Ⓓ Breng een laag mortel aan
- Ⓕ Appliquer une couche de mortier
- Ⓓ Eine dünne Mörtelschicht aufbringen
- Ⓔ Aplique una capa fina de mortero
- Ⓓ Stendere uno strato sottile di malta
- Ⓒ Нанесите тонкий слой раствора

- Ⓔ Place blocks
- Ⓓ Plaats blokken
- Ⓕ Placer les blocs
- Ⓓ Nächste Reihe Steine aufsetzen
- Ⓔ Posicione los bloques
- Ⓓ Posare i blocchi
- Ⓒ Разместите блоки



- Ⓔ Safety
- Ⓓ Veiligheid
- Ⓕ Sécurité
- Ⓓ Sicherheit
- Ⓔ Seguridad
- Ⓓ Dispositivi protezione individuale (DPI)
- Ⓒ Безопасность






QUBEMURFOR®


Compact I / Renfort de maçonnerie en rouleau

- (EN) Use Murfor® Compact I-50 with a wall width of ≤ 130 mm.
- (NL) Gebruik Murfor® Compact I-50 bij een muurwijdte van ≤ 130 mm.
- (FR) Utilisez Murfor® Compact I-50 avec une largeur de paroi de ≤ 130 mm.
- (DE) Murfor® Compact I-50 für Mauerwerksbreiten ≤ 130 mm.
- (ES) Coloque Murfor® Compact I-50 con un espesor de pared de ≤ 130 mm.
- (IT) Utilizzare Murfor® Compact I-50 per muri con larghezza di ≤ 130 mm.
- (PUC) Используйте Murfor® Compact I-50 если толщина стены ≤ 130 мм.

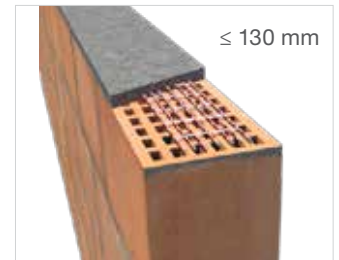


Murfor® Compact I-50

- (EN) Use Murfor® Compact I-100 with a wall width of > 130 mm < 200 mm.
- (NL) Gebruik Murfor® Compact I-100 bij een muurwijdte van > 130 mm < 200 mm.
- (FR) Utilisez Murfor® Compact I-100 avec une largeur de paroi > 130 mm < 200 mm.
- (DE) Murfor® Compact I-100 für Mauerwerksbreiten > 130 mm < 200 mm.
- (ES) Coloque Murfor® Compact I-100 con un espesor de pared > 130 mm < 200 mm.
- (IT) Utilizzare Murfor® Compact I-100 per muri con larghezza > 130 mm < 200 mm.
- (PUC) Используйте Murfor® Compact I-100 если толщина стены > 130 мм < 200 мм.

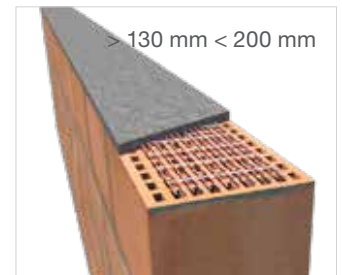


Murfor® Compact I-100

- (EN) Use 2x Murfor® Compact I-50 with a wall width of ≥ 200 mm.
- (NL) Gebruik 2x Murfor® Compact I-50 bij een muurwijdte van ≥ 200 mm.
- (FR) Utilisez 2x Murfor® Compact I-50 avec une largeur de paroi ≥ 200 mm.
- (DE) 2x Murfor® Compact I-50 für Mauerwerksbreiten ≥ 200 mm.
- (ES) Coloque 2x Murfor® Compact I-50 con un espesor de pared ≥ 200 mm.
- (IT) Utilizzare 2x Murfor® Compact I-50 per muri con larghezza ≥ 200 mm.
- (PUC) Используйте 2x Murfor® Compact I-50 если толщина стены ≥ 200 мм.

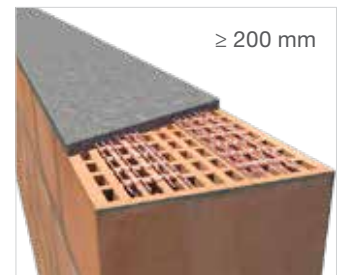

2x Murfor® Compact I-50

- (EN) Use a minimum overlap of 500 mm.
- (NL) Gebruik een minimum overlaplengte van 500 mm.
- (FR) Utilisez un chevauchement minimum de 500 mm.
- (DE) Überlappung mindestens 500 mm.
- (ES) Colocas un solape mínimo de 500 mm.
- (IT) Effettuare una sovrapposizione di almeno 500 mm.
- (PUC) Минимальный нахлест 500 мм.

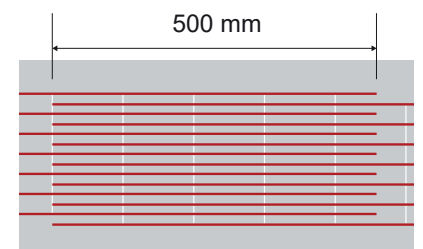

- (EN) Avoid positioning overlaps in the same vertical plane.
- (NL) Vermijd positionering van overlappen in hetzelfde verticale vlak.
- (FR) Évitez de placer des chevauchements dans le même plan vertical.
- (DE) Vertikal übereinander verlaufende Überlappungen sind nicht zulässig.
- (ES) Evite solapes en el mismo plano vertical.
- (IT) Evitare la sovrapposizione nello stesso piano verticale.
- (PUC) Следует избегать нахлеста материала на одной вертикали.

